



LAZY LOUNGE CHAIR OUTDOOR

Lazy lounge chair outdoor Retro (CZM5427) - Lazy lounge chair outdoor Natural (CZM5431) - Lazy lounge chair outdoor Bungalow (CZM5430)

General specifications

Dimensions:

105x105x75 cm

Seat height: 40 cm

Seat depth: 56 cm

Fabric specifications cushions

Colour cushions:

Retro

Natural

Bungalow

Fabric covering specifications retro outdoor:

- Covering composition: 100% Olefin
- Material weight: 215 gr/m³
- Abrasion resistance: 15.000 cycles, martindale
- Pilling resistance: [DIN EN ISO 12945-2:2021]
- Flammability: [CAL BT 117:2013 section 1]
- Colour fastness to light: class 4,5

Fabric covering specifications natural:

- Covering composition: 100% Olefin
- Product weight: 290 gr/m³
- Abrasion resistance: 26.000 cycles, martindale
- Pilling resistance: class 4-5
- Flammability: -
- Colour fastness to light: class 4-5

Fabric covering specifications bungalow:

- Covering composition: 100% acrylic printed
- Material weight: 210 gr/m³
- Abrasion resistance: 30.000 cycles, martindale
- Pilling resistance: class 4 / 5000 rubbs
- Flammability: -
- Colour fastness to light: class 7-8

Filling:

- Body: dryfeel foam
- Seat filling: dryfeel foam
- Back filling: dryfeel foam

A special mesh on the underside of the seat allows residual water to drain easily through the underside.



Retro



Natural



Bungalow



Care instructions Lazy lounge chair outdoor:

Wash with a soft cloth and a mixture of a mild detergent and warm water. Rinse with warm water, and wipe dry with a clean, soft cloth. Do not use abrasive, acid, alcohol-based, or solvent-based cleaners; they will damage the surface and cause the metal to erode. Wipe up immediately using a clean, soft cloth. Avoid sharp objects. Store furniture indoors during winter.